

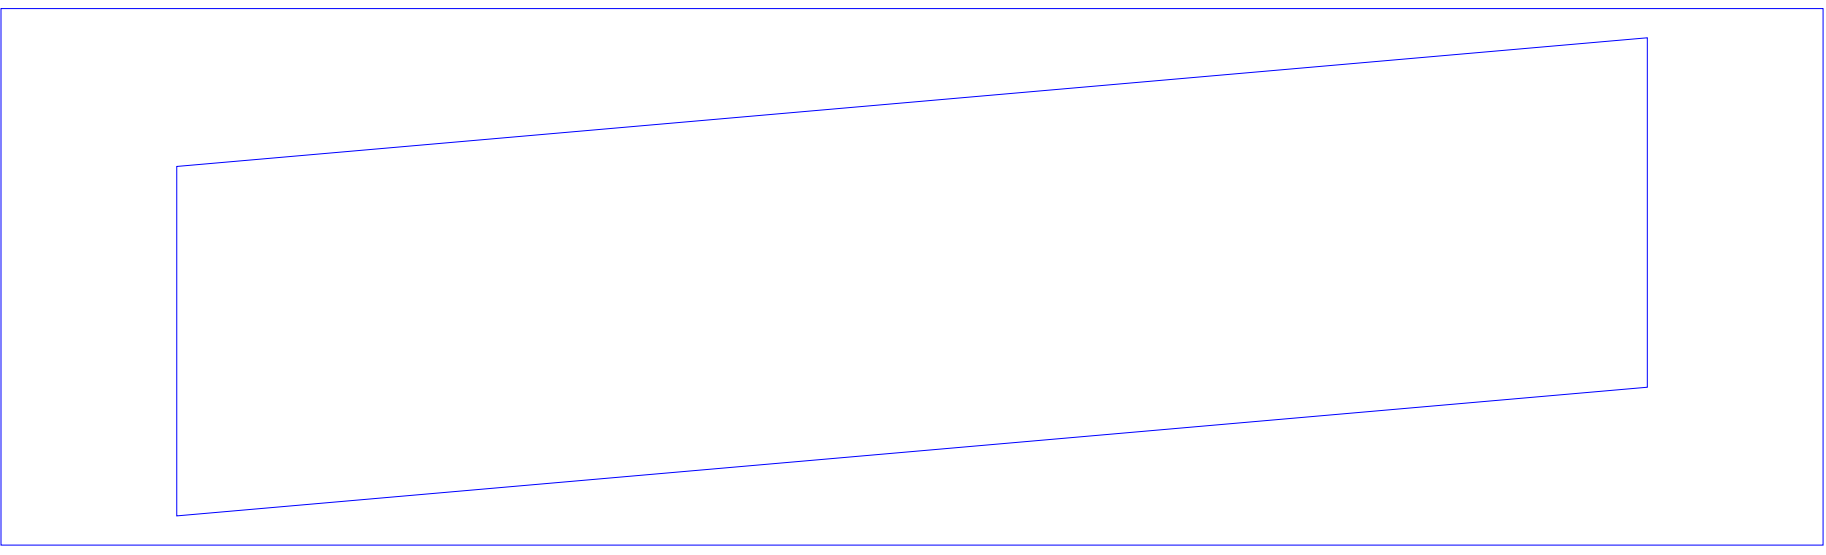
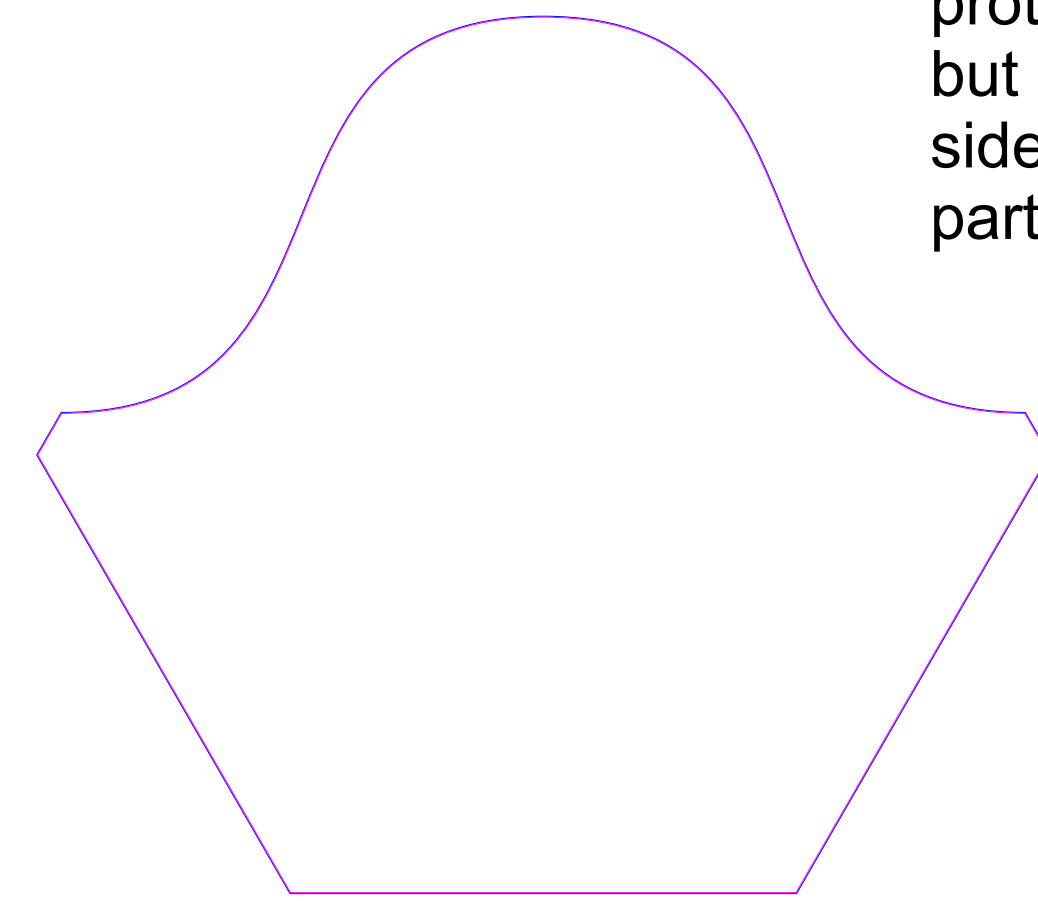


Use 1/8" (0.12") thick material.  
Exception:  
Use 1/4" material for Shaft.

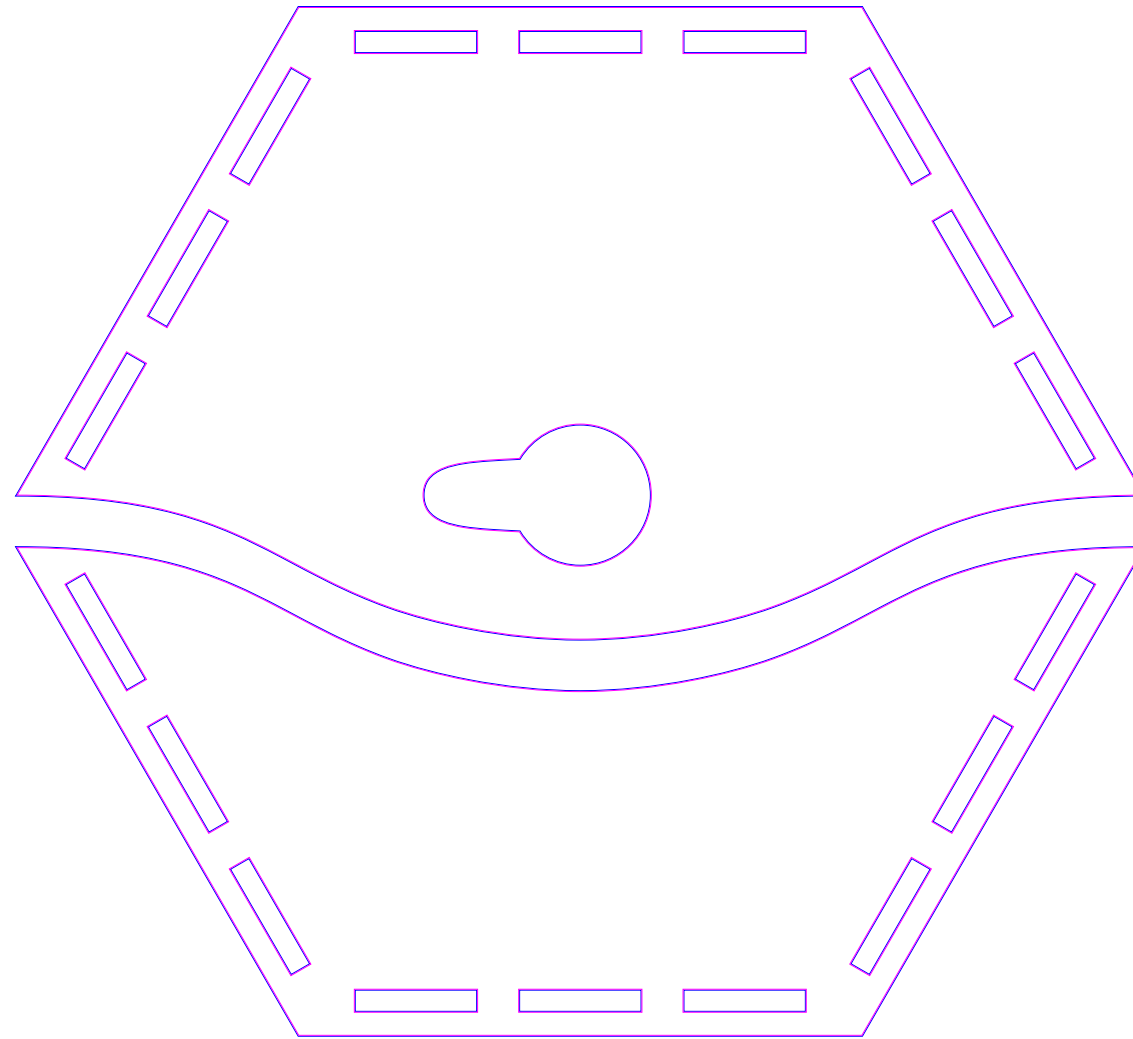

Mirror latch holes for other end.

Can use hole from other cuts for latch.

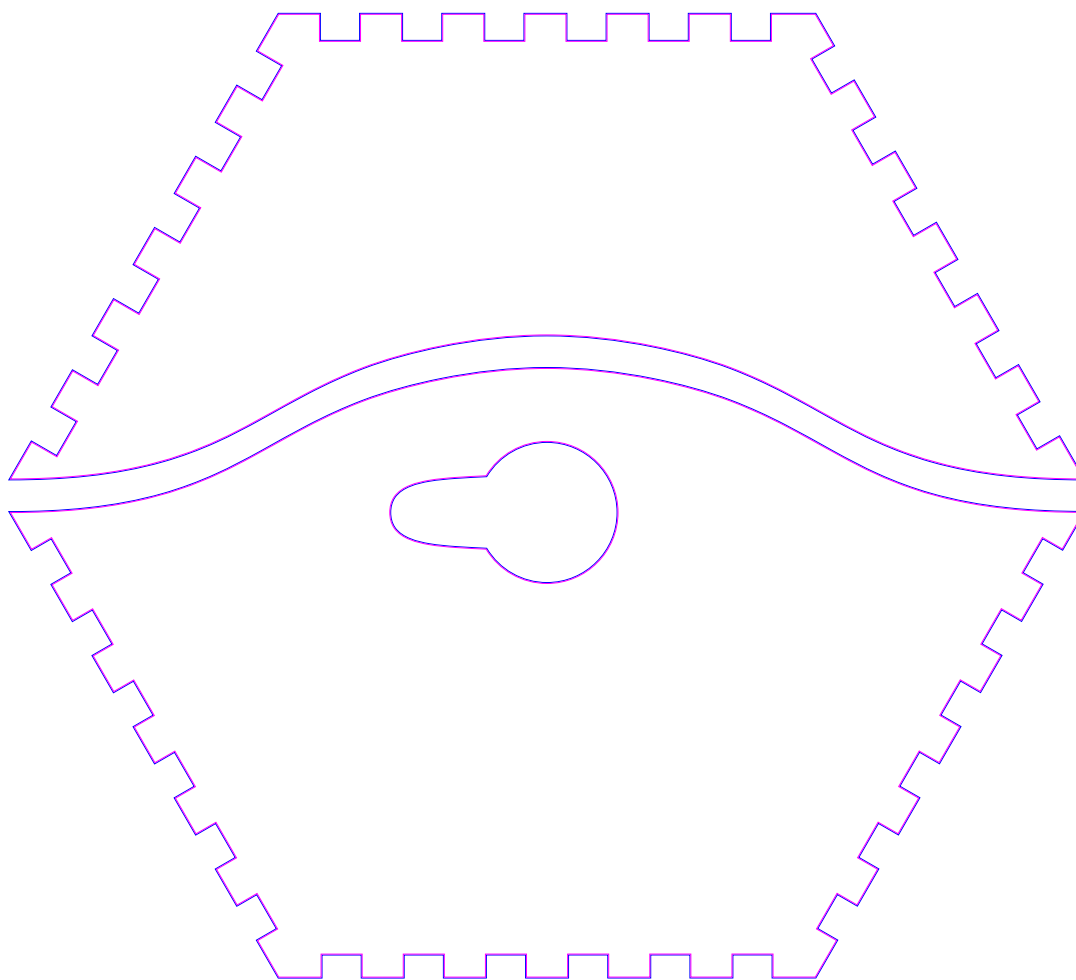

File edges of latch down (both sides of protrusion, but only one side of round part.)